

Lester Electrical

AUTOMATIC BATTERY CHARGERS

CUSHMAN MODELS

886884, 886481, 886482, 886483

LESTER MODELS

10675, 06885, 10025, 10030

PLEASE SAVE THESE IMPORTANT SAFETY AND OPERATING INSTRUCTIONS

For correct operation of the equipment, it is important to read and be familiar with this entire manual before installing and operating the charger.
DO NOT DISCARD THIS MANUAL AFTER READING.



LOOK FOR THIS SYMBOL TO POINT OUT SAFETY PRECAUTIONS. IT MEANS: *BECOME ALERT—YOUR SAFETY IS INVOLVED.* IF YOU DO NOT FOLLOW THESE SAFETY INSTRUCTIONS, INJURY OR PROPERTY DAMAGE CAN OCCUR.

1. Connect power supply cord to properly grounded outlet of the proper voltage and frequency as specified on the charger nameplate. Circuit breaker or fuse protection in the AC line must be adequate to handle the input power requirements. When it is necessary to use an AC extension cord to the charger use a three-conductor, 12 gauge cord with ground and keep as short as possible.
2. Monitor ammeter for correct charge rate. Normal charging at the finish charge rate for the last 3 to 5 hours is important to achieve equalization of all battery cells every time the batteries are charged.

New batteries or batteries charged in cold temperatures (below 50°F) will require more time to achieve full charge.

3. Charger turns off automatically when batteries are fully charged.

 CAUTION: DO NOT LEAVE CHARGER ON WHILE UNATTENDED FOR MORE THAN TWO CONSECUTIVE DAYS. SEVERE OVERCHARGING AND POSSIBLE DAMAGE TO BATTERIES WILL RESULT IF CHARGER SHOULD FAIL TO TURN OFF.